



Generator anti-condensation heater AH1H

Appropriate when the generator set is to be sited in a low ambient and/or high humidity environment, the heater maintains the AC generator at a suitable temperature to prevent winding corrosion due to condensation.

The heater itself is powered by a 110/120 volt (VAC 120) or 208/240 volt (VAC 240) AC auxiliary supply protected by a fuse inside the main control panel. When the generator set is not running the heater is automatically connected to the AC supply through a power relay mounted in the control panel. Upon receiving a start signal the AC supply is automatically disconnected by the power relay and automatically reconnected when the start signal is removed and the engine has stopped.

Generator Frame	Nominal Heater Power Consumption (Watts)
LC1500	60
LC3100	100
LC5000	250

Materials and specifications are subject to change without notice. CAT, CATERPILLAR, their respective logos, "Caterpillar Yellow," the "Power Edge" trade dress as well as corporate and product identity used herein, are trademarks of Caterpillar and may not be used without permission.

www.Cat-ElectricPower.com